

AIR CURTAIN





TAC-14GS-HC-LD

2



TAC-72-LD ***DISCONTINUED**



TAC-48SM-LD *DISCONTINUED

Be sure to before insta

A WARNING!

Be sure to read and fully understand this document before installing, operating, maintaining or servicing this appliance. Failure to do so can result in appliance failure, property damage, serious injury or death. Appliance failure, injury or property damage due to improper installation is not covered by warranty.

• USER ACTION!

TRUE tracks the history of your appliance by its serial number. For easy reference, record your appliances full model name and serial number below. This information is on your serial label. Serial label location varies by appliance.

Model Name:

Serial Number:

True Manufacturing Co., Inc.

2001 East Terra Lane • O'Fallon, Missouri 63366-4434 (636) 240-2400 • FAX: (636)-272-2408

International FAX: (636)-272-7546 • (800)-325-6152

Parts Department: (800)-424-TRUE (424-8783) Parts Department FAX: (636)-272-9471

North America – Canada and Caribbean

Warranty Phone +1 855-878-9277 Warranty Fax +1 636-980-8510 Warranty Email warrantyinquiries@truemfg.com Technical Phone +1 855-372-1368 Technical Email service@truemfg.com 7:00 am-6:00 pm CST Monday-Friday, 8:00 am-12:00 pm Saturday

Mexico

Phone +52 555-804-6343/44 service-mexicocity@truemfg.com 9:00 am-5:30 pm M-F

Latin America

Phone: +52 555-804-6343/44 servicelatam@truemfg.com 9:00 am-5:30 pm M-F

UK, Ireland, Middle East, Africa & India Phone: +44 (0) 800-783-2049

Service-emea@truemfg.com 8:30 am–5:00 pm M–F

Australia Phone: +61 2-9618-9999 service-aus@truemfg.com 8:30 am-5:00 pm M-F

European Union & Commonwealth of Independent States Phone: +41 61 563 0705 service-emea@truemfg.com 8:00 am-5:00 pm M-F

INSTALLATION MANUAL

True

AIR CURTAIN

Original Instructions



12/13/2023

THANK YOU

FOR YOUR PURCHASE

Congratulations!

TTUP

The primary purpose of this document is to assist the installation, maintenance, and servicing of your TRUE appliance. This document contains information important to safety, operation, maintenance, and servicing. **DO NOT** discard this document. TRUE is solely the appliance manufacturer. For assistance finding a qualified technician, please visit our Service Company Locator at **truemfg.com/support/service-locator**.

• NOTICE!



Your appliance may not exactly match the figures shown in this manual.

Contents

| Preface |
|------------------------------------|
| Signal & Symbol Definitions |
| Important Safety Information |
| Basic Safety & Operation Warnings4 |
| Personal Injury Warnings5 |
| Hydrocarbon Refrigerant Warnings |
| Appliance Disposal Warnings |
| Electrical Safety Warnings7 |

About Your Appliance & Installation Requirements

| Appliance Specifications | 8 |
|----------------------------------|---|
| Clearances | 8 |
| Recommended Operating Conditions | 9 |
| Electrical Requirements | |
| Electrical Installation & Safety | |

Installation & Setup

| Uncrating | .12 |
|--------------------------------------------|-----|
| Appliance Location | .14 |
| Leveling Screw, Leg or Castor Installation | .14 |
| Level the Appliance | .17 |
| Seal the Appliance to the Floor | .17 |
| Shelf Installation | .18 |
| Product ID Strip Installation | .21 |

Appliance Operation

| Startup | | |
|--------------|---------------------------------|----|
| Temperature | Control & Light Switch Location | 23 |
| General Sequ | uence of Operation | |
| | | |

Maintenance & Servicing

| Warranty | |
|------------------------------------------------|----|
| 8 Tips to Help Prevent Rust on Stainless Steel | |
| Stainless Steel Care & Cleaning | |
| General Surface Care & Cleaning | |
| Condenser Coil Cleaning | |
| Recommended Maintenance | |
| Component Replacement | 27 |

| warranty | |
|----------------------|----|
| Warranty Information | 35 |



Preface

The warning, guidelines, and recommendations within this document are meant to prevent appliance damage, injury, or death. Please carefully read all warnings, guidelines, and recommendations before proceeding to ensure the continued safe use and maintenance of your TRUE appliance.

Signal & Symbol Definitions

Below are symbols you may see in this document. Some symbols may not appear.

| Signal Word Definitions | | | |
|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|--|--|
| A DANGER! An imminently hazardous situation which, if not avoided, will result in serious injury or death. | | | |
| ▲ WARNING! | A potentially hazardous situation which, if not avoided, can result in serious injury or death. | | |
| ▲ CAUTION! | A potentially hazardous situation which, if not avoided, may result in minor or moderate injury; an unsafe practice. | | |
| USER ACTION! | User action alert, follow all recommendations to avoid appliance or product damage. | | |
| ! NOTICE! | Important information not related to hazards or risk of personal injury. | | |

| Safety Symbols | | Additional Symbols | | |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| | Safety alert ; alerts reader to potential physical injury hazards. Obey all safety messages following this symbol to avoid possible injury or death. | 0 | Mandatory action alert symbol ; alerts reader to required or recommended actions. Obey all messages and recommendations following this symbol to avoid appliance or product damage. | |
| | Flammable material; fire hazard. | NOTICE > | Important information not related to hazards or risk of personal injury. | |
| 4 | Electrical shock hazard. | | Review and understand the installation manual before installing, operating, or servicing. | |
| | Tipping hazard; tip-over hazard. | | Wear eye protection . | |
| | Sharp element; cut or sever hazard. | | Wear protective gloves . | |
| | Eye hazard ; risk of eye injury. | | Secure gas cylinders to prevent falling cylinders. | |
| | Exploding pressurized cylinder hazard. | | DO NOT use extension cord. | |
| | Slippery surface hazard. | | DO NOT use adaptor plugs. | |
| | Crush or cut hazard. | | DO NOT dispose of with other household waste. | |

Important Safety Information

Important Safety Information

Basic Safety & Operation Warnings

Follow basic safety precautions, including the following, to reduce risk of personal injury, electric shock, fire, or death.

| | A WARNING! | | |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| <u>î</u> | Be sure to read and fully understand this document before installing, operating, maintaining, or servicing this appliance. Failure to do so can result in appliance failure, property damage, serious injury, or death. Appliance failure, personal injury, or property damage due to improper installation is not covered by warranty. | | |
| ę, | Failure to install, operate, and maintain the appliance as detailed in this document will negatively affect safety, appliance performance, component life, and warranty coverage. | | |
| | The appliance must be installed in accordance with all applicable laws, codes, and regulations. | | |
| | The manufacturer cannot be held responsible for injury or damage resulting from improper, incorrect, and unreasonable use. | | |
| | This appliance is not to be used, cleaned, or maintained by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, without proper supervision or instruction. | | |
| | DO NOT install or operate equipment that has been misused, abused, neglected, damaged, or altered/modified from original manufactured specifications. | | |
| | • DO NOT modify or alter the appliance. Improper alterations can result in electric shock, personal injury, fire, or death. | | |
| | DO NOT use electrical appliances inside the food storage compartments of the appliance unless the appliances are approved by the manufacturer. | | |
| | The appliance owner is responsible for performing a Personal Protective Equipment (PPE) Hazard Assessment and to ensure adequate protection during maintenance and cleaning procedures. | | |
| | Use appropriate tools, safety equipment, and PPE during installation and servicing. | | |
| | Only use the appliance for its intended purpose as described in this document. Failure to do so may result in equipment damage, personal injury, or death. | | |
| | Overloading, incorrectly installing, or improperly loading shelves can cause shelf failure (as well as negatively affect the appliance's operation), resulting in appliance damage, product damage, or personal injury. | | |
| | • Keep the area surrounding the appliance clean to avoid appliance damage from debris or pests. | | |
| | | | |
| | | | |



Important Safety Information (cont.)

Personal Injury Warnings

Only qualified technicians should install and service the appliance. For assistance finding a qualified technician, please visit our Service Company Locator at **truemfg.com/support/service-locator**. TRUE is solely the appliance manufacturer and is not responsible for installation.


| | A DANGER! |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | DO NOT allow children to play with or in the appliance. Child entrapment or personal injury can occur. |
| | DO NOT store or use the following in the vicinity of this or any other appliance: |
| | Gasoline or other flammable vapors and liquids |
| | Combustible or explosive substances, such as aerosol cans with a flammable propellant |
| | Other volatile or flammable substances |
| | Contact TRUE Manufacturing to locate refrigerant lines and electrical wiring before drilling, cutting or puncturing interior or exterior walls. Failure to do so could result in damage, personal injury, or death. |
| | A WARNING! |
| | Only qualified technicians should install and service the appliance. |
| $\mathbf{\Lambda}$ | Use appropriate tools, safety equipment, and personal protective equipment (PPE) during installation and servicing. |
| | • DO NOT touch the cold surfaces in the freezer compartment when hands are damp or wet. Skin may stick to extremely cold surfaces. |
| | This product can expose you to chemicals including Di-(2-Ethyl hexyl) Phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to <u>P65warnings.ca.gov</u> . |
| | Slippery Surfaces! Moisture from improper drainage can create slippery surfaces near the appliance. It is your duty to immediately warn your customers of, and dry, the slippery surface. All wet floor areas must be marked with a wet floor sign. |
| | Sharp edges! Take care when moving, installing, cleaning, servicing, and maintaining the appliance to avoid cuts. Be sure to take care when reaching under the appliance or handling metal components. |
| | Keep fingers out of pinch point areas, such as the space between appliance doors and surrounding cabinetry. Take care closing doors with children nearby. |
| | Tip over hazard! Appliance may pose a tipping hazard when uncrating, installing, or moving the appliance. Take appropriate safety precautions. Use of tip over restraints may only reduce (not eliminate) the tipping hazard. Never allow children to climb or hang on drawers, doors, or shelves. |
| | Crush or cut hazard! Keep clear when uncrating, installing, moving, or servicing the appliance. |
| 4 | Risk of electric shock or burn! See "Electrical Safety Warnings" for more information. |



Important Safety Information (cont.)

Hydrocarbon Refrigerant Warnings

TRUE appliances use hydrocarbon refrigerant (R-290/513A/600a). Check the serial label to identify the appliance's refrigerant. Serial label location varies by model.

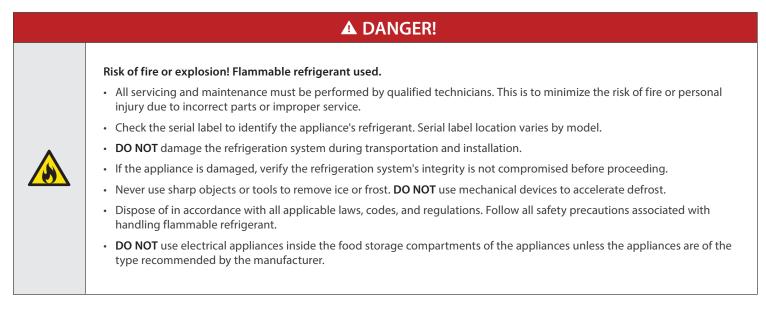

Appliance Disposal Warnings

| ▲ DANGER! | | | | |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| | Risk of child entrapment! Children can get trapped inside discarded appliances and suffocate. Never dispose of your appliance without taking precautions to prevent child entrapment, even if the appliance only sits unattended for a short period of time. Child entrapment precautions include the following: Remove all doors (or drawers for drawer appliances). Leave all interior drawers and shelving in place to make climbing (and fitting) inside the appliance more difficult. | | | |
| | Risk of fire or explosion! Flammable refrigerant and insulation used. Dispose of in accordance with all applicable laws, codes, and regulations. Follow all safety precautions associated with handling flammable refrigerant and insulation. | | | |
| | DO NOT dispose of your appliance with household waste. | | | |
| | | | | |

Important Safety Information (cont.)

Electrical Safety Warnings

A WARNING!



Risk of electric shock, burn, or fire!

- It is the appliance owner's responsibility to ensure the electrical connection meets all applicable building codes. Failure
 to meet these code requirements can result in appliance damage, fire, electric shock or burns, serious personal injury, or
 death.
- Before connecting your appliance to the power supply, verify the supply voltage and circuit rating match the appliance. Correct improper supply voltage or circuit size immediately.
- Before connecting your appliance to the power supply, verify the power supply is correctly grounded. If the power supply
 is not grounded, correct immediately. TRUE recommends hiring a qualified electrician to inspect your wall outlet and circuit
 to ensure they are properly grounded.
- DO NOT clean appliance with a pressure washer or hose. DO NOT immerse power cord in water.
- Powering off an electronic control or setting temperature controls to 0 (off position) does not remove power from all components. Unplug the appliance or turn off the power supply before installation or servicing.
- The appliance should receive power from its own individual dedicated electrical circuit. This provides the best performance and prevents overloading the power supply.
- The original equipment manufacturer (OEM) power cord has a grounding plug to minimize the possibility of electrical shock.
 - Never remove the ground prong from the power cord! For personal safety, this appliance must be properly grounded.
 - Never use an extension cord! An extension cord is any component that adds length to the OEM power cord when connecting the cord to a power source.
 - Never use an adapter plug! An adapter plug alters the OEM plug configuration when connecting the plug to a power source.
- Never use a power cord that shows cracks or abrasion damage along its length or at either end.
 - Immediately have a qualified technician replace damaged OEM power cords with OEM components.
 - Never unplug your appliance by pulling on the power cord. Always grip the plug and pull the plug straight out of the outlet.
 - Take care to prevent rolling over or damaging the power cord when moving the appliance.
 - Never use the power cord to prevent appliance movement. Always use adequate means to keep the appliance in place without transmitting stress to the power cord.
 - Keep power cord away from heated surfaces.
 - DO NOT let power cord hang over edge of table or counter.
 - DO NOT excessively bend or place heavy articles on the power cord.

INOTICE!

TRUE will not warranty the following:

- · Compressor failures due to improper incoming voltage.
- Appliance with tampered OEM power cords.
- Appliance connected to adapters or extension cords.

For more details, see TRUE's full warranty statement.

About Your Appliance & Installation Requirements

About Your Appliance & Installation Requirements



• USER ACTION!

TRUE is not responsible for damage incurred during shipment. Always carefully inspect for freight damage before receiving and installing your appliance. If there is damage, note all damage on the delivery receipt, immediately file a claim with the delivery freight carrier, and contact TRUE. **Do not install the appliance or put it in service.**

Thank you for choosing TRUE Manufacturing to meet your refrigeration needs. TRUE highly recommends a qualified technician and electrician install your appliance to ensure correct installation. The cost of professional installation is money well spent. Only qualified technicians should install and service the appliance.

For assistance finding a qualified technician, please visit our Service Company Locator at **truemfg.com/support/service-locator**. TRUE is solely the appliance manufacturer and is not responsible for installation.

The appliance owner is responsible for proper installation and maintaining the appliance as described in this document. Routine care and maintenance procedures are not covered by TRUE's warranty.


Appliance Specifications

Some things to know about your appliance are as follows:

- Appliance tested for IEC to ISO Climate Class 8 [75°F (24°C) temperature, 55% relative humidity].
- For proper operation, ambient temperatures shall not be less than 60°F (15.5°C) and no greater than 75°F (24°C) or as indicated on the serial label.
- Appliance is not for the storage and/or display of potentially hazardous foods when the temperature control is set above 41°F (5°C).
- Appliance is not suitable for outdoor use, unless otherwise stated on the serial label.
- Appliance is not suitable for an area where a pressure washer or hose may be used.

- Always plug the appliance into its own individual dedicated electrical circuit!
- DO NOT use extension cords or adapter plugs.
- Before connecting your appliance to the power supply, verify the incoming voltage (±5%) and the amps match the operation ratings on the appliance's serial label. Correct improper incoming voltage or amps immediately. Serial label location varies by model.
- Before connecting your appliance to the power supply, verify the power supply is correctly grounded. If the power supply is not grounded, correct immediately.
- Ensure the installation location will provide adequate clearances and sufficient airflow for the appliance. See "Clearances" (pg. 8).
- Read and follow all warnings and maintenance instructions. Failure to do so may result in damage and void the warranty on your appliance.

Clearances

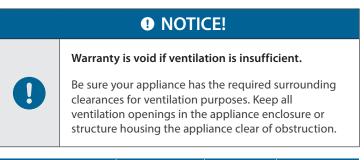

| MODEL | ТОР | SIDES | ВАСК |
|-------|---------------|-----------|--------------|
| TAC | 8" (203.2 mm) | 0" (0 mm) | 3" (76.2 mm) |




About Your Appliance & Installation Requirements (cont.)


Recommended Operating Conditions


- Do not place in direct sunlight.
- No HVAC supply or return air vents pushing air into or pulling air out of the appliance.
- No ceiling fans.
- No doorways.
- Make sure appliance is level from front-to-back and side-to-side.

NOTICE Check for correct clearance in back of and above the appliance. A 3" (77 mm) clearance is required at the rear of the appliance and 8" (204 mm) clearance above the appliance.

- Maximum ambient conditions 75°F (23.8°C) or as indicated on the serial label, and 55% relative humidity.
- Place appliance in an area that will not have any air drafts.
- Excessive airflow around appliance can effect interior appliance airflow (air-curtain).

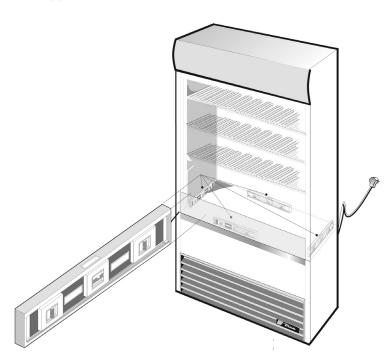


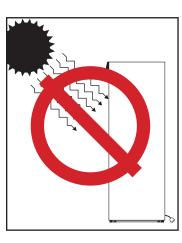


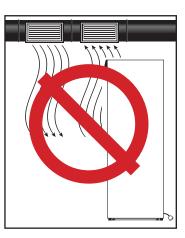





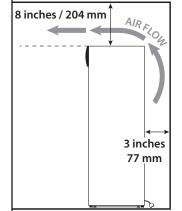

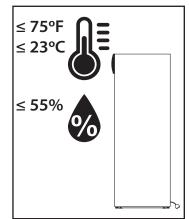

* Or as indicated on the serial label.

About Your Appliance & Installation Requirements (cont.)

Electrical Requirements

USER ACTION!

Find a copy of the wiring diagram with our serial number lookup at

truemfg.com/support/serial-number-lookup.

Wire gauge chart (115V)

| 115 Volts | Distance in Feet to Center of Load | | | | | | | | | | | |
|--------------|------------------------------------|----|----|----|----|----|----|----|-----|-----|-----|-----|
| AMPS | 20 | 30 | 40 | 50 | 60 | 70 | 80 | 90 | 100 | 120 | 140 | 160 |
| 2 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 |
| 3 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 12 |
| 4 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 |
| 5 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 10 | 10 |
| 6 | 14 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 10 | 10 | 10 |
| 7 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 10 | 10 | 10 | 8 |
| 8 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 |
| 9 | 14 | 14 | 14 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 |
| 10 | 14 | 14 | 14 | 12 | 12 | 10 | 10 | 10 | 10 | 8 | 8 | 8 |
| 12 | 14 | 14 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 8 | 6 |
| 14 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 | 6 | 6 | 6 |
| 16 | 12 | 12 | 12 | 10 | 10 | 8 | 8 | 8 | 8 | 6 | 6 | 6 |
| 18 | 12 | 12 | 10 | 10 | 8 | 8 | 8 | 8 | 8 | 8 | 8 | 5 |
| 20 | 12 | 12 | 10 | 10 | 8 | 8 | 8 | 6 | 6 | 6 | 5 | 5 |
| 25 | 10 | 10 | 10 | 8 | 8 | 6 | 6 | 6 | 6 | 5 | 4 | 4 |
| 30 | 10 | 10 | 8 | 8 | 6 | 6 | 6 | 6 | 5 | 4 | 4 | 3 |

Wire gauge chart (230V)

| 230 Volts | Distance in Feet to Center of Load | | | | | | | | | | | |
|--------------|---------------------------------------------------------------------------------------------------------------------------------|----|----|----|----|----|----|----|----|----|----|----|
| AMPS | 20 30 40 50 60 70 80 90 100 120 140 160 | | | | | | | | | | | |
| 5 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 |
| 6 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 12 |
| 7 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 12 | 12 |
| 8 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 |
| 9 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 10 |
| 10 | 14 | 14 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 10 | 10 |
| 12 | 14 | 14 | 14 | 14 | 14 | 14 | 12 | 12 | 12 | 10 | 10 | 10 |
| 14 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 8 |
| 16 | 12 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 |
| 18 | 12 | 12 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 8 | 8 | 8 |
| 20 | 12 | 12 | 12 | 12 | 10 | 10 | 10 | 10 | 10 | 8 | 8 | 8 |
| 25 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 10 | 8 | 8 | 6 | 6 |
| 30 | 10 | 10 | 10 | 10 | 10 | 10 | 8 | 8 | 8 | 6 | 6 | 6 |

Electrical Installation & Safety

NEMA Plug Configurations

60 HZ USE ONLY!

TRUE uses these types of NEMA plugs shown. If you **DO NOT** have the proper outlet, have a licensed electrician verify and install the correct power source.



International (IEC) Plugs Only

International appliances may be supplied with a power cord that will require installation. Install this cord before connecting the appliance to a power source.

NOTICE > International plug configurations will vary by country and voltage.

Installation

Fully seat the power cord into the appliance receptacle until it locks in position. See fig. 1.

Removal

Depress the red button. See fig. 2.

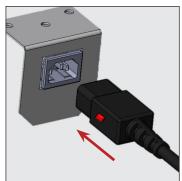


Fig. 1. Fully insert the power cord into the receptacle.




Fig. 2. Push the red button to remove the plug.



Notes

| | |
|------|------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Installation & Setup

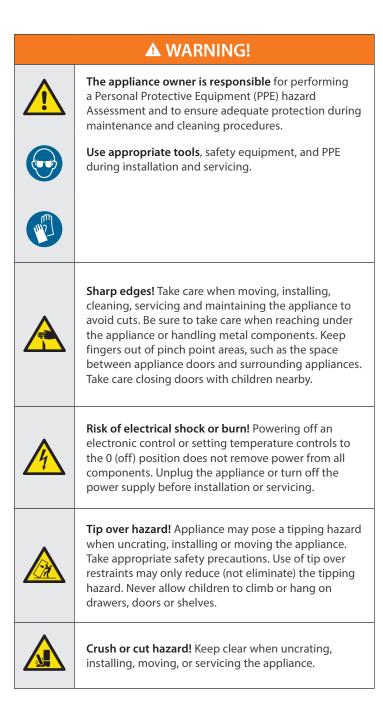

Uncrating

• USER ACTION!

 If the appliance is damaged, note all damage on the delivery receipt, immediately file a claim with he delivery freight carrier, and contact TRUE. DO NOT install the appliance or put it in service.



 If the appliance is laid on its back or side, be sure to leave the appliance upright twice the time it has been laying down (up to four (4) hours) before plugging the appliance into a power source. If this time exceeds four (4) hours, let the appliance sit upright for 24 hours before powering the appliance.

NOTICE!

Keys for appliances with door locks are located in the warranty packet.

Required Tools

Required tools include (but may not be limited to) the following:

- Adjustable wrench
- Phillips screwdriver

Procedure

- 1. Remove the outer packaging (cardboard and bubble wrap or Styrofoam corner and clear plastic). See fig. 1. Inspect for concealed damage. Again, immediately file a claim with the freight carrier if there is damage.
- 2. With an adjustable wrench, remove all shipping bolts securing the wood skid to the bottom of the cabinet. See fig. 2.

NOTICE Move the unit as close as possible to the final location before removing the wooden skid. Some models may require removing the front and/or rear grill/cover to access the shipping bolts.

3. If leveling legs or castors **will not be used**, remove the cabinet from the wood skid and set the skid aside.

NOTICE > DO NOT lift the cabinet by the countertops, doors, drawers, or grills.

If leveling legs or castors **will be used**, rotate the cabinet on the skid (see fig. 3) and see the installation instructions on pg. 15.



Fig. 1. Remove the outer packaging.

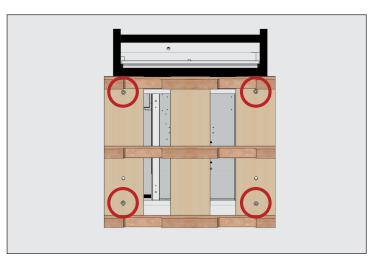


Fig. 2. Remove all shipping bolts.



Fig.3. Remove the cabinet from the wood skid and set aside.

Appliance Location

- Ensure that the drain hose or hoses are positioned in the pan.
- Free the plug and cord from inside the lower rear of the appliance (**DO NOT** plug in).
- Place the appliance close enough to the electrical supply so that extension cords are never used.

Leveling Screw, Leg, or Castor Installation

WARNING!



Tipping hazard! ALWAYS verify center leveling screws fully contact the floor after leveling the appliance.

Leveling legs are provided to assist with leveling the appliance. Adjustable legs provide 6" (152 mm) of clearance under the appliance. Castors provide appliance mobility.

Required Tools

Required tools include (but may not be limited to) the following:

• Adjustable Wrench

Procedure – Leveling Screws

If leveling screws are not factory installed, then, with access to the appliance bottom, install the leveling screws into the threaded holes in the frame rail or appliance bottom. See figs. 1–3.



Fig. 1. Leveling screw.

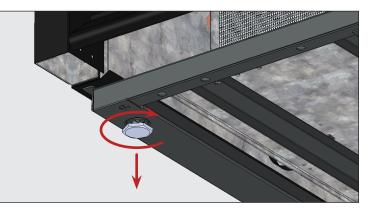


Fig. 2. Turn the leveling screws clockwise to lower the appliance.

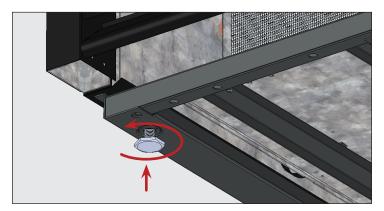


Fig. 3. Turn the leveling screws counterclockwise to raise the appliance.

Procedure - 6" (152 mm) Leveling Legs

- 1. Access the appliance bottom.
- 2. If present, remove the leveling screws.
- **3.** Thread the leveling legs into the frame rail or appliance bottom. See figs. 4 and 5.
- Verify that the appliance is level. See "Level the Appliance" (pg. 17).
- **5.** If the appliance is not level, gently lift and support the low end of the appliance. Then, with an adjustable wrench, screw the leveling leg bottom stems in or out to level and support the appliance. See fig. 4 and 6.

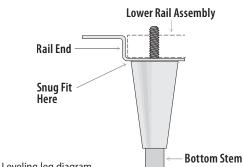


Fig. 4. Leveling leg diagram.

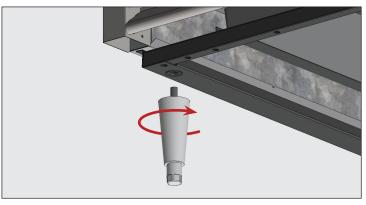


Fig. 5. Screw the leveling legs into the threaded holes.

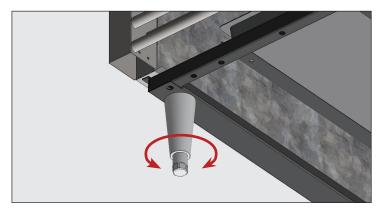


Fig. 6. Turn the bottom stem to level the appliance.




Procedure — Castors



Install castors with brakes in the front.

USER ACTION!

- 1. Access the appliance bottom.
- 2. If present, remove the leveling screws.
- **3.** Thread the castors into the frame rail or appliance bottom. See figs. 7 and 8.
- 4. Verify the appliance is level. See "Level the Appliance" (pg. 17).
- On the low end of the appliance, loosen the castor bolt enough to slide provided castor shims between the castor bearing and the bottom rail of the appliance. See fig. 9.
- 6. Install the desired number of shims. See fig. 9.
 - If more than one shim is used, be sure shim slots are offset. See fig. 10.
 - DO NOT use more than four (4) shims on a castor.
 - Be sure each shim touches the castor stem.
- 7. Tighten and secure the shims and castors.
- 8. Verify the appliance is level.
- **9.** If the appliance is not level, repeat the steps 3 6 until the appliance is level and supported.

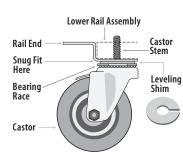



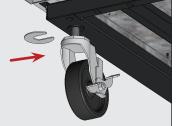


Fig. 9. Insert the castor shim(s). be sure to tighten the castor stem.

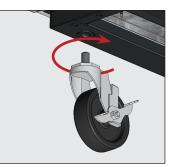


Fig. 8. Screw the castors into the threaded holes.


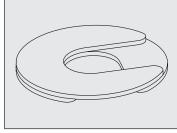


Fig. 10. Install multiple shims with offset slots.





Level the Appliance

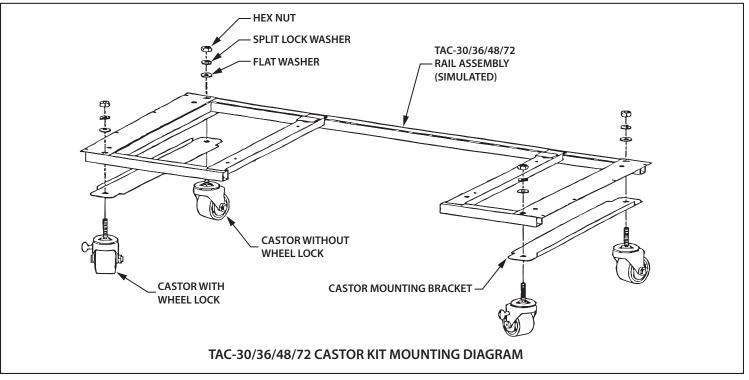

WARNING!

Tipping hazard! ALWAYS verify center leveling screws fully contact the floor after leveling the appliance.

Proper leveling of your TRUE appliance is critical to operating success (for non-mobile appliances). Leveling impacts effective condensate removal and door operation.

See "Leveling Screw, Leg or Castor Installation" (pg. 14) for level adjustment and shimming information.

Procedure

Position the appliance in its final installation location. Then, level the appliance front-to-back and side-to-side. See fig. 1.

- 1. Position the level on the inside floor of the appliance near the doors (level parallel to appliance front). Level the appliance.
- 2. Position the level at the inside rear of the appliance (level parallel to appliance back). Level the appliance.
- **3.** Position the level on the left and right inside floor (level parallel to appliance sides). Level the appliance.

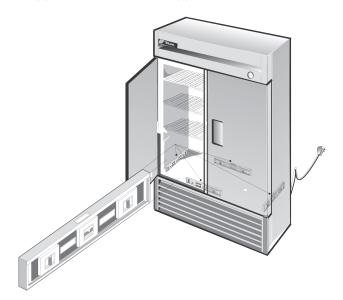


Fig. 1. Measure the level along the perimeter of the interior floor.

Seal the Appliance to the Floor

• USER ACTION!



Asphalt floors are susceptible to chemicals. TRUE recommends installing a layer of tape between the asphalt and the sealant to protect the floor.

The following procedure describes sealing a non-mobile appliance to the floor for NSF standards. This may not be required for your application.

Procedure

- Position the appliance in its final installation location. Be sure to leave adequate clearance between the back and sides per "Clearances" (pg. 8) to ensure proper ventilation.
- 2. Level the appliance front-to-back and side-to-side. See "Level the Appliance" (pg. 17).
- **3.** Draw an outline of the appliance base on the floor.
- 4. Raise and block the front side of the appliance.
- 5. Apply a bead of NSF-approved sealant (see list below) to the floor, 1/2" (13 mm) inside the front part of the outline drawn in step 3. The bead of sealant must be heavy enough to seal the entire appliance surface when the appliance is lowered on top of the sealant.
- 6. Raise and block the rear of the appliance.
- **7.** Apply sealant to the floor on the other three sides, as outlined in step 5.
- **8.** Examine the appliance to ensure that it is sealed to the floor around the entire perimeter.

NSF-Approved Sealants

- 3M #ECU800 Caulk
- 3M #ECU2185 Caulk
- 3M #ECU1055 Bead
- 3M #ECU1202 Bead
- Armstrong Cork Rubber Caulk
- Products Research Co. #5000 Rubber Caulk
- G.E. Silicone Sealer
- Dow Corning Silicone Sealer

Shelf Installation

 A WARNING!

 
 Remember to follow the guidelines below when loading product:

 When loading, product may NOT block the air flow from the top (honeycomb) or at the bottom (stainless steel evaporator cover).

 Product may NOT extend over the front edge of the shelves.


Cantilever Shelving Installation

Cantilever shelves come packaged inside the unit. Leg leveling parts may be taped to the top of the shelf packaging. See fig. 1.



TAC-72

Hook the shelf support tabs into the shelf standard in the rear corners and middle of the appliance. See fig. 2.

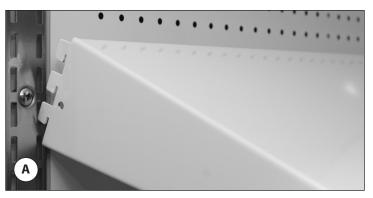

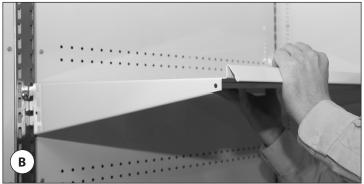


Fig. 2. Hook the shelf supports into the shelf standards.

TAC-48SM-LD

NOTICE For ease of installation, it is recommended that the lower shelf be installed first.

- 1. Install the shelf brackets into the shelf standards.
 - **a.** Position the shelf bracket in front of the shelf standard. Raise the front of the bracket up at a 45° angle, to allow the bracket support tab to slide into the slot in the shelf standard. See fig. 3.
 - **b.** Slide the shelf angle adjustment tab into the shelf standard. Position the tab in the shelf bracket to support the shelf at the desired angle.
 - c. Repeat a and b for the shelf bracket on the other side.
- 2. Install the shelves onto the shelf brackets.
 - **a.** Position the shelf on the shelf brackets. The horizontal bends on the left and right sides of the shelf should be to the outside of the brackets.
 - **b.** Move the back of the shelf up and back until the front of the shelf clears the shelf support tab on the shelf bracket. See fig. 4.
 - **c.** Once the shelf has cleared the shelf support tab, slide the shelf forward until the front of the shelf is under the front shelf support tab. When installed correctly, the shelf will be supported between the notched areas in the shelf brackets. See fig. 5.
 - d. Repeat a, b, and c for additional shelves.

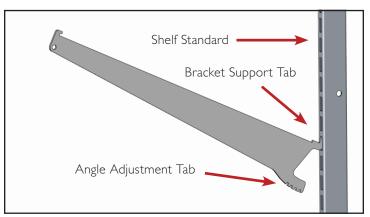


Fig. 3. Install the shelf brackets.

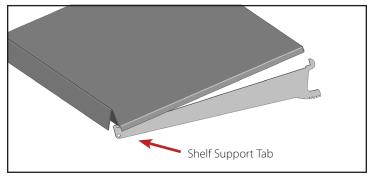


Fig. 4. Install the shelves.

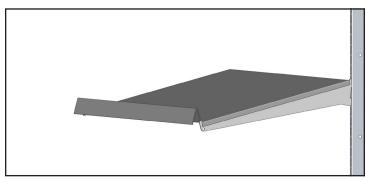


Fig. 5. Correct shelf installation.



Wire Shelving Installation

A WARNING!

Overloading, incorrectly installing, or improperly loading shelves can cause shelf failure and negatively affect appliance operation, resulting in appliance damage,



resulting in appliance damage, product damage, or personal injury.

DO NOT use pliers or any crimping tools when installing shelf clips. Altering shelf clips in any way can lead to shelving instability.

Installation Tips

- Install **all** the shelf clips before installing any shelves.
- Start at the bottom shelf and work your way up.
- Always lay the back of each shelf down on the rear clips before the front.

Procedure

- 1. Hook the shelf clips into the shelf standards. See fig. 6.
- 2. Push up on the bottom of the clip. See fig. 7.

NOTICE > You may need to squeeze or twist the bottom of the shelf clip for proper installation. Position all four shelf clips equal in distance from the floor for flat shelves.

- **3.** Ensure the shelf clip is not loose or able to wiggle out of the shelf standard. See figs. 8 and 9.
- **4.** Place the shelves on the shelf clips with the cross support bars facing down.

NOTICE > Be sure all shelf corners are properly seated.



Fig. 6. Installing top tab of shelf clip.

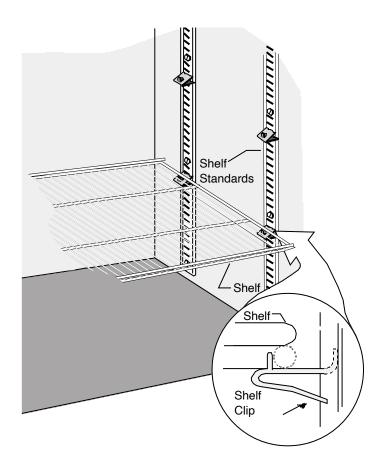




Fig. 7. The bottom tab of the shelf clip will fit tightly.



Fig. 8. You may need to squeeze or twist *Fig. 9.* Installed shelf clip. the bottom of the shelf clip to install.





Product ID Strip Installation

Procedure

- 1. Turn the wire shelf around. The back of the shelf becomes the front. See fig. 1.
- **2.** With the larger strip opening on the bottom, snap the flavor strip onto the shelf. See figs. 2-3.
- 3. Install tags into the flavor strip. See fig. 4.

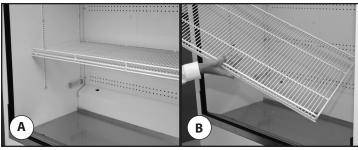


Fig. 1. Turn the shelf around.

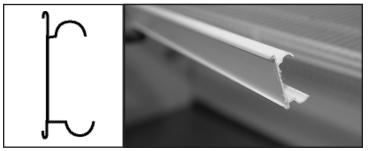


Fig. 2. Snap the product ID strip onto the shelf with the larger side on the bottom.



Fig. 3. Install the product ID strip.



Fig. 4. Install product labels in the product ID strip.

Appliance Operation

▲ WARNING – SPOILAGE!

prior to usage to verify operation.



The owner is solely responsible for ensuring safe holding temperature levels for all food items. Failure to do so may result in unsafe food products. Loss or spoilage of products in your appliance is not covered by warranty. In addition to following recommended installation procedures, run the appliance for 24 hours

Startup



• USER ACTION!

Before loading product, run your TRUE appliance empty for 24 hours to verify proper operation. Remember, our factory warranty **DOES NOT** cover product loss!

- The compressor is ready to operate when the appliance is purchased. All you need to do is plug in the appliance.
- Good air flow inside your TRUE appliance is critical. Take care to prevent product from pressing against the sides or back wall and coming within 4" (101.6 mm) of the evaporator housing. Refrigerated air off the evaporator coil must circulate throughout the appliance for even product temperatures.
- Excessive tampering with the control could lead to service difficulties. If replacing the temperature control is ever needed, be sure to order the replacement from your TRUE dealer or recommended service agent.
- All covers and access panels must be in place and properly secured before operating this appliance.

Appliance Operation (cont.)

Temperature Control & Light Switch Location


The light symbol 🔆 shows the approximate location of the light switch.

The electronic temperature control can act as a light switch. To control the light, press the up arrow \blacksquare .



Light Switch

Behind the top airflow honeycomb.

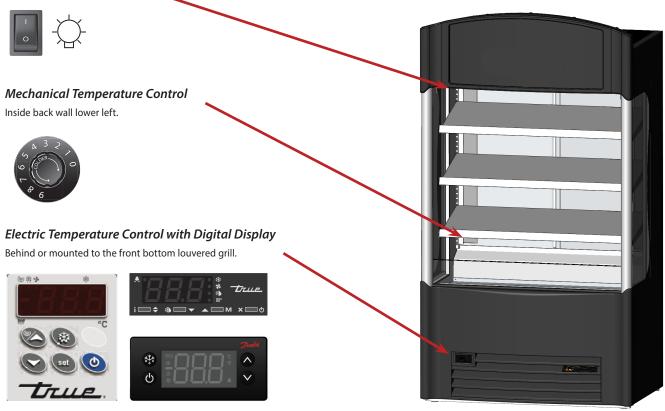



Appliance Operation (cont.)

General Sequence of Operation — Refrigerator and Freezer Appliances

USER ACTION!



For more information regarding a appliance's temperature control adjustment or general sequence of operation, please see our Temperature Control Adjustment—Sequence of Operation Manual in our resource library at truemfg.com/service-manuals/sequence-of-operation or scan the QR code.

When the appliance is plugged in:

- Interior lights will illuminate on glass door models (see Temperature Control & Light Switch Location, pg. 23).
- An electronic control with digital display will illuminate (if installed).
- There may be a short delay before the compressor and/or evaporator fan(s) start. This delay may be determined by time or by temperature, which could be the result of an initial defrost event that will last at least 6 minutes.
- The temperature control/thermostat may cycle the compressor and evaporator fan(s) on and off together. Every appliance will require a defrost event to ensure the evaporator coil remains clear of frost and ice buildup. Defrost is initiated by a defrost timer or by the electronic control.

EXCEPTION – Models TSID, TDBD, TCGG, and TMW do not have an evaporator fan(s).

- The temperature control/thermostat senses either an evaporator coil temperature or air temperature, NOT product temperature.
- An analog thermometer, digital thermometer, or electronic control display may reflect the refrigeration cycle swings of up and down temperatures, NOT product temperature. **The most accurate method to determine a appliance's operation is to verify the product temperature.**
- Refrigerators with mechanical temperature controls will defrost during every compressor off-cycle.
- Freezers with mechanical temperature controls will defrost by time initiation as determined by a defrost timer.

EXCEPTION – Models TFM, TDC, THDC and TMW require a manual defrost. The frequency of this manual defrost will depend on the appliance's usage and ambient conditions.

• An electronic control with a digital display (if installed) will show **dEF** during defrost.

NOTICE The display may have a short delay before showing a temperature after a defrost event has expired and instead show **dEF** during a refrigeration cycle.

- Models with an analog or digital thermometer may show higher than normal temperatures during defrost.
- A refrigerator will use the evaporator fans to clear the coil during defrost.

EXCEPTION – Models TSID, TDBD, and TCGG do not have an evaporator fan(s).

• A freezer will use heaters to clear the evaporator coil during defrost.

NOTICE The evaporator coil heater and drain tube heater are only energized during defrost. Defrost is terminated when a specific evaporator coil temperature is reached or by a time duration.



Notes

Maintenance & Servicing



A WARNING!

- Only qualified technicians should install and service the appliance. For assistance finding a qualified technician, please visit our Service Company Locator at <u>truemfg.com/support/service-locator</u>.
- Turn off and lockout all utilities (gas, electric, water) according to approved practices during maintenance or servicing.



The appliance owner is responsible for performing a Personal Protective Equipment (PPE) Hazard Assessment and ensuring adequate protection during maintenance and cleaning procedures.

Use appropriate tools, safety equipment, and PPE during installation and servicing.

Sharp Edges!



- Take care when moving, installing, cleaning, servicing, and maintaining the ice machine to avoid cuts. Be sure to take care when reaching under the ice machine or handling metal components.
- Stay clear of pinch point areas, such as the space between appliance doors and surrounding cabinetry. Take care closing doors with children nearby.

WARNING!

Risk of electric shock or burn!

- Powering off an electronic control or setting temperature controls to the 0 (off) position DOES NOT remove power from all components. Unplug the appliance or turn off the power supply before installation or servicing.
- **DO NOT** clean appliance with a pressure washer or hose.



Flammable refrigerant/insulation used! Have a licensed service provider service your appliance to minimize the risk of possible ignition due to incorrect parts or improper service and to ensure the operator's health and safety.



Crush or cut hazard! Keep clear when uncrating, installing, moving, or servicing the appliance.



Slippery Surfaces! Moisture from improper drainage can create slippery surfaces near the appliance. It is your duty to immediately warn your customers of, and dry, the slippery surface. All wet floor areas must be marked with a wet floor sign.

USER ACTION!

• For additional maintenance instruction, please visit the media center at truemfg.com.

 Any appliance adjustments are to be made AFTER the appliance has been verified level and properly supported.

!

• NOTICE!

The appliance owner is responsible for maintaining the appliance as described in the installation manual. Routine care and maintenance procedures are not covered by TRUE's warranty.

Component Replacement

- Replace components with original equipment manufacturer (OEM) components such as those shown in fig. 1. OEM parts minimize the risk of possible ignition due to incorrect parts. Use of non-OEM components may void TRUE's warranty.
- Have a licensed service provider service your appliance to minimize the risk of possible ignition due to incorrect parts or improper service and to ensure the operator's health and safety.



Fig. 1. Example of OEM parts.



Recommended Maintenance

See recommended maintenance tasks and frequencies below. Some tasks may be required more frequently based on your installation.

| Maintenance Tasks | Monthly | Quarterly | Annually |
|---------------------------------------------------------------------------------------------------------|---------|-----------|----------|
| Verify the appliance maintains product temperature. | х | Х | x |
| Inspect power cord for damage; if damaged, replace immediately. | x | х | x |
| Verify the power cord is fully plugged into the wall receptacle | | | x |
| Inspect the overall condition of the appliance and its components (such as castors, doors, and hinges). | х | Х | x |
| Verify operation of all moving parts (such as fan motors, doors and door cords). | | | х |
| Check physical condition of all gaskets; verify gaskets seal correctly. | | Х | х |
| Inspect any lamps, lamp holder connections, LED modules, and LED module connections. | х | Х | х |
| Check all condenser coils (fronts and backs) for dust and debris; if present, clear the debris. | х | Х | х |
| Check physical condition of all condenser coils and evaporator coils; straighten coil fins as needed. | | х | х |
| Check all evaporator coils for dust and debris; if present, clear the debris. | | х | х |
| Verify the drain line is clear of debris. | | Х | Х |



Model: Serial Number:

| Jan. | Feb. | Mar. | Apr. | Мау | Jun. | Jul. | Aug. | Sep. | Oct. | Nov. | Dec. |
|------|------|------|------|-----|------|------|------|------|------|------|------|
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |
| | | | | | | | | | | | |

Condenser Coil Cleaning

| A WARNING! | | | | | | | | |
|------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|--|--|--|--|
| | The appliance owner is responsible for performing a Personal Protective Equipment (PPE) Hazard Assessment and ensuring adequate protection during maintenance and cleaning procedures. Use appropriate tools, safety equipment, and PPE during installation and servicing. | | | | | | | |
| 4 | Risk of electric shock or burn! Unplug the appliance or turn off the power supply before installation or servicing. DO NOT clean appliance with a pressure washer or hose. | | | | | | | |
| | Sharp edges! Coil fins are sharp and metal components can have sharp edges. Take care when moving, installing, cleaning, servicing, and maintaining the appliance to avoid cuts. | | | | | | | |
| | Risk of eye injury! Airborne dust and debris can cause eye injury. Eye protection recommended. | | | | | | | |
| | | | | | | | | |

Required Tools

Required tools include (but may not be limited to) the following:

- 1/4" nut driver
- 3/8" nut driver
- Stiff bristle brush
- Tank of compressed air
- Vacuum cleaner
- Flashlight
- Eye protection
- Gloves

Procedure

- 1. Unplug the unit or turn off the power supply.
- 2. Remove the front louver grill. See figs. 1-3.
- **3.** With a stiff bristle brush, carefully clean accumulated dirt from the front condenser coil fins. See fig. 4.
- With dirt removed from the surface of the coil, use a flashlight to verify that you can see through the coil and observe the condenser fan blade. See fig. 5.
 NOTICE > If your view is blocked, gently blow compressed air or CO2 through the coil until it is clean.
- 5. Carefully vacuum any dirt around the condensing unit area.
- **6.** Reinstall the louvered grill, connect power to the unit, and verify operation.

• NOTICE!

The cleaning of the condenser coil is not covered by warranty!



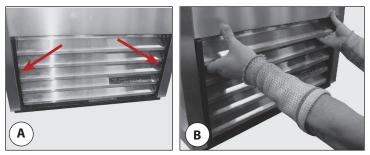


Fig. 1. Louver grill screw location (A). Pull the grill from the appliance front (B).

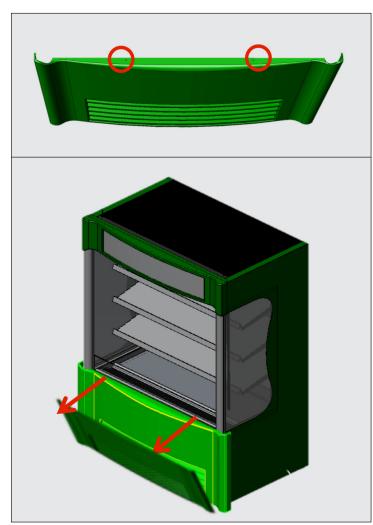


Fig. 3. TAC-48SM: Remove the screws and tilt the top of the grill forward.

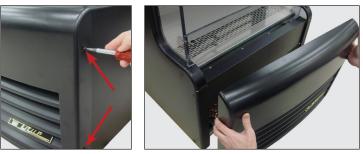


Fig. 2. TAC-14GS-HC-LD Grill removal. Lift grill away from cabinet after removing screws.

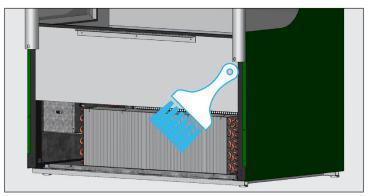


Fig. 4. Never brush across the coil fins.

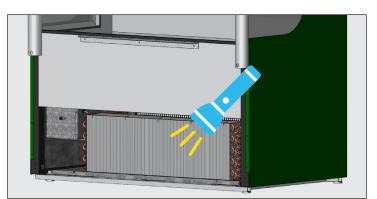


Fig. 5. Verify all blockages have been removed.

Additional Information

If you have any questions, please contact your local TRUE Manufacturing Service Department. See the front cover for locations and contact information.

• **DO NOT** place any filter material in front of the condensing coil.

General Surface Care & Cleaning

| | A WARNING! | Gaskets • Clean gaskets v |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| <u>/</u> | Risk of electrical shock or fire! DO NOT clean appliance with a pressure washer or hose. | • DO NOT use sh • Avoid full-stren Interior • Clean interior si |
| | Slippery Surfaces! Moisture from improper drainage can create slippery surfaces near the appliance. It is your duty to immediately warn your customers of, and dry, the slippery surface. All wet floor areas must be marked with a wet floor sign. | and water to he abrasive cleane • For plastic or po clean DO NOT |
| | The appliance owner is responsible for performing a Personal Protective Equipment (PPE) Hazard Assessment and to ensure adequate protection during maintenance and cleaning procedures. | • For plastic or po clean DO NOT |
| | Use appropriate tools , safety equipment, and PPE during installation and servicing. | products. DO N chlorides or phi information. |

- Clean gaskets with warm soapy water.
- DO NOT use sharp tools or knives to scrape a gasket.
- Avoid full-strength cleaning products.
- Clean interior surfaces with a mild solution of baking soda and water to help reduce odor; **DO NOT** use harsh or abrasive cleaners.
- For plastic or powder-coated parts, use warm soapy water to clean **DO NOT** use stainless steel cleaners or similar solvents.
- For plastic or powder-coated parts, use warm soapy water to clean **DO NOT** use stainless steel cleaners or similar solvents.
- **DO NOT** clean stainless steel with steel wool or abrasive products. **DO NOT** use detergents or degreasers with chlorides or phosphates. See model-specific manual for more information.



Stainless Steel Care & Cleaning

USER ACTION



DO NOT use any steel wool, abrasive, or chlorinebased products to clean stainless steel surfaces.

Stainless Steel Opponents

There are three basic things which can break down your stainless steel's passivity layer and allow corrosion to form.

- Scratches from wire brushes, scrapers, steel pads are just a few examples of items that can be abrasive to stainless steel's surface.
- Deposits left on your stainless steel can leave spots. You may have hard or soft water depending on what part of the country you live in. Hard water can leave spots. Hard water that is heated can leave deposits if left to sit too long. These deposits can cause the passive layer to break down and rust your stainless steel. All deposits left from food prep or service should be removed as soon as possible.
- Chlorides are present in table salt, food, and water. Household and industrial cleaners are the worst type of chlorides to use.

Stainless Steel Cleaning and Restoration

Stainless steel cleaners must be free of phosphates, chlorine, chloride, and ammonia.

True offers environmentally-friendly cleaner and polish through our True Store at <u>https://store.trueresidential.com/products/</u> <u>stainless-steel-clean-polish-kit</u>

Custom Painted Appliance and Hardware

For painted doors and other surfaces, use a mild solution of soap and water with a soft microfiber cloth.

8 Tips to Help Prevent Rust on Stainless Steel

Maintain the Cleanliness of Your Equipment

Avoid build-up of hard stains by cleaning frequently. Use cleaners at the recommended strength (alkaline chlorinated or non-chloride).

Use the Correct Cleaning Tools

Use non-abrasive tools when cleaning your stainless steel products. The stainless steel's passive layer will not be harmed by soft cloths and plastic scouring pads.

Clean Along Polishing Lines

Polishing lines ("grain") are visible on some stainless steels. Always scrub parallel to polishing lines when visible. Use a plastic scouring pad or soft cloth when you cannot see the grain.

Use Alkaline, Alkaline-Chlorinated or Non-Chloride Cleaners

While many traditional cleaners are loaded with chlorides, the industry is providing an ever increasing choice of non-chloride cleaners. If you are not sure of your cleaner's chloride content, contact your cleaner supplier. If they tell you that your present cleaner contains chlorides, ask if they have an alternative. Avoid cleaners containing quaternary salts, as they can attack stainless steel, causing pitting and rusting.

Rinse

When using chlorinated cleaners, you must rinse and wipe dry immediately. It is better to wipe standing cleaning agents and water as soon as possible. Allow the stainless steel equipment to air dry. Oxygen helps maintain the passivity film on stainless steel.

Never Use Hydrochloric Acid (Muriatic Acid) on Stainless Steel

Even diluted, hydrochloric acid can cause corrosion, pitting and stress corrosion cracking of stainless steel.

Water Treatment

To reduce deposits, soften hard water when possible. Installation of certain filters can remove corrosive and distasteful elements. Salts in a properly maintained water softener can also be to your advantage. Contact a treatment specialist if you are not sure of the proper water treatment.

Regularly Restore & Passivate Stainless Steel

Stainless steel gets its stainless properties from the protective chromium oxides on its surface. If these oxides are removed by scouring, or by reaction with harmful chemicals, then the iron in the steel is exposed and can begin to oxidize, or rust. Passivation is a chemical process that removes free iron and other contaminants from the surface of stainless steel, allowing the protective chromium oxides to re-form. Warranty Information (USA & Canada Only)

Warranty Information

To view and download the Warranty Information for USA & Canada, please scan the QR code below.





truemfg.com